


Restoring Soft-Close

Step by step instructions on how to
repair the damper on your
TK10 Trash Krusher

Step 1: Remove the damper cover, found on the lower rear of the can.

Release the clips from inside the bin patiently. You may use a key or screwdriver to gently push the clips toward each other to release.

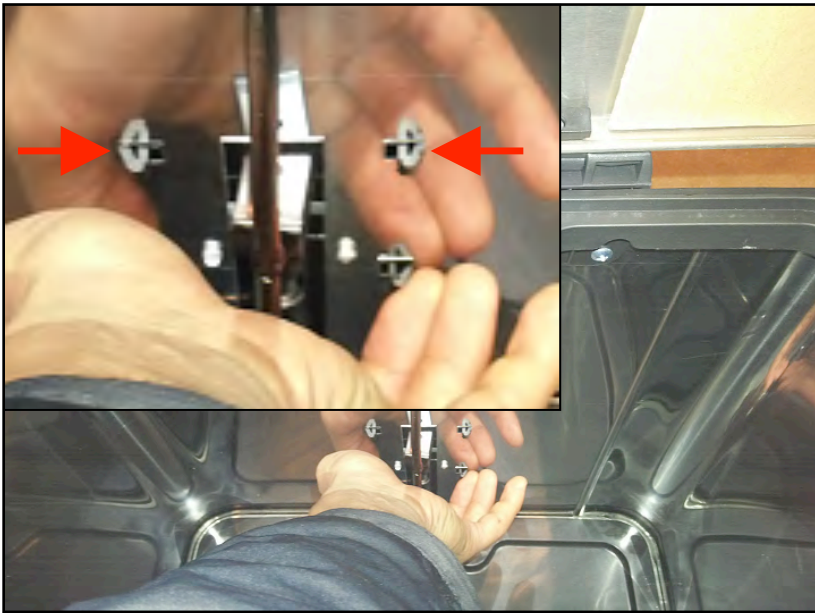


Lift off the plastic damper cover off the lower rear of the can.



Step 2: Push the damper back into the damper clamp.

Push the green head of the damper back into the clamp as pictured below.

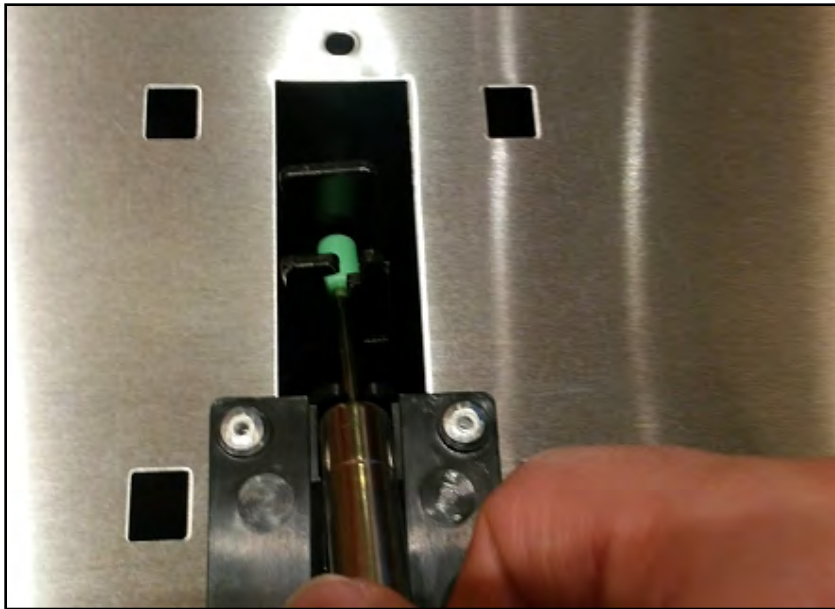

Make sure the body of the damper is aligned inside the rack as well.



Step 3: Re-attach the damper cover.

Insert the clips of the damper cover. You may need to insert one side of clips first, then apply gentle inward pressure on the other side to slide clips in.



Press damper cover flush against the can. Finished.

