

Thank you for your order!

We appreciate your business. Additional information on your product may be available on our website.



Happy?

Wonderful! We are very glad. Please share your experience with us and others. It helps us know what you like best!

- Review this product at www.householdessential.com.

Search the item # from the home page to find the product. Leave your review under the review tab on the product's page!

- Follow us on Facebook and Instagram!

Customer Service

1-800-922-5524 | 1-314-428-5657
info@householdessential.com

Open Mon-Fri at 8:30 am CT.
Closed all national holidays.



©2018 HOUSEHOLD ESSENTIALS, LLC
Hazelwood, MO 63042
www.householdessential.com

10/2018



Not happy?

Please give our St. Louis customer service a call at 1-800-922-5524. We are here to help.

- Missing parts?
- Having trouble with assembly?

 
 
 
 


Retro Side Table

8105-1




Parts

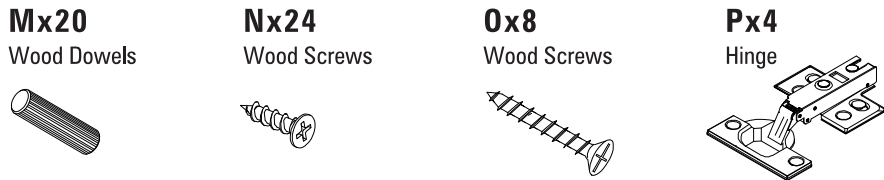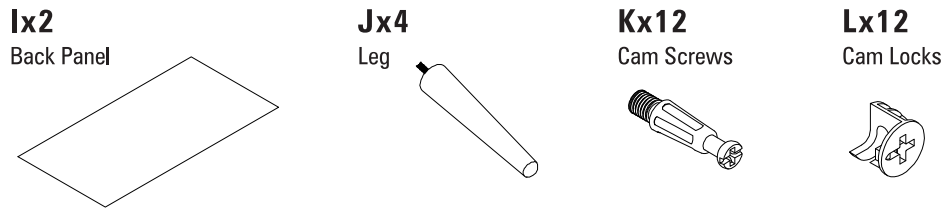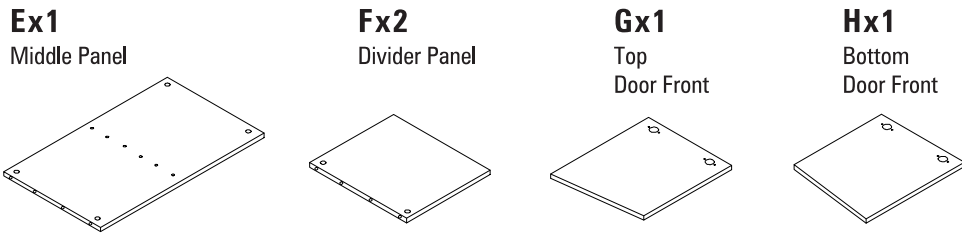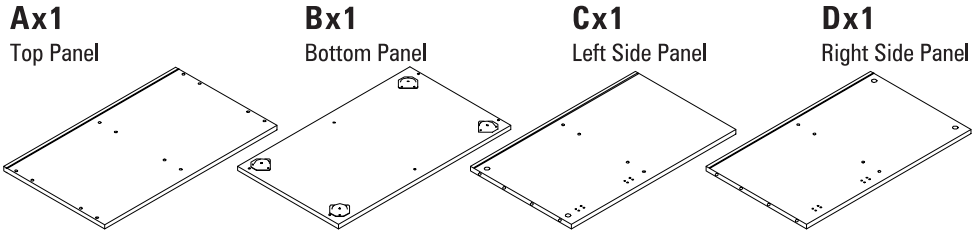

Assembly con't


1 Insert cam screws (K) into the top panel (A), middle panel (E), left (C) and right (D) side panels.

 Insert wood dowels (M) into the middle panel (E), left (C) and right (D) side panels.

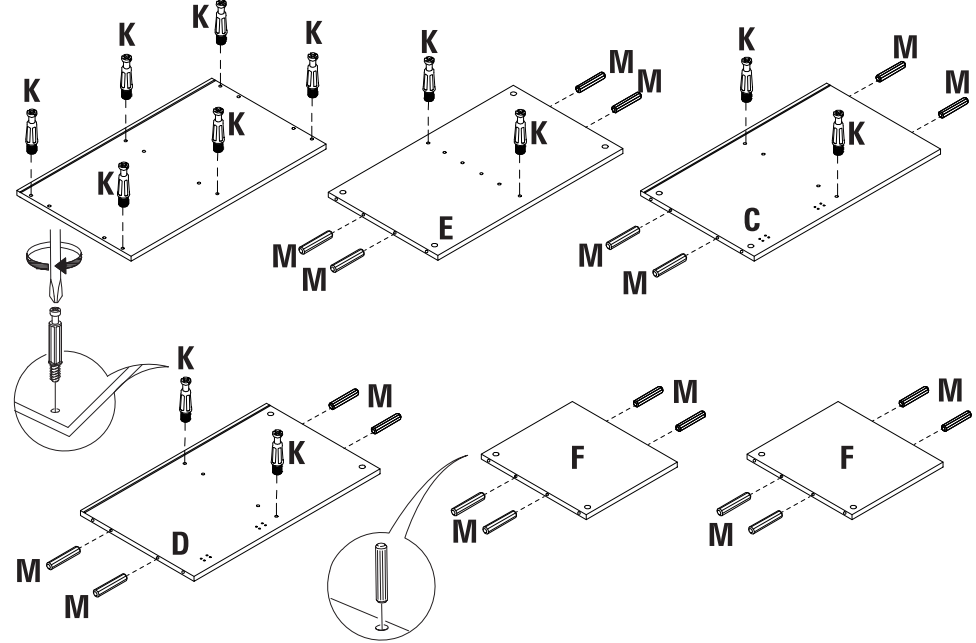


2 Attach divider (F) to the top panel (A) and turn cam to lock.

 Attach side panels (C and D) to the middle panel (E) and turn and lock cams.

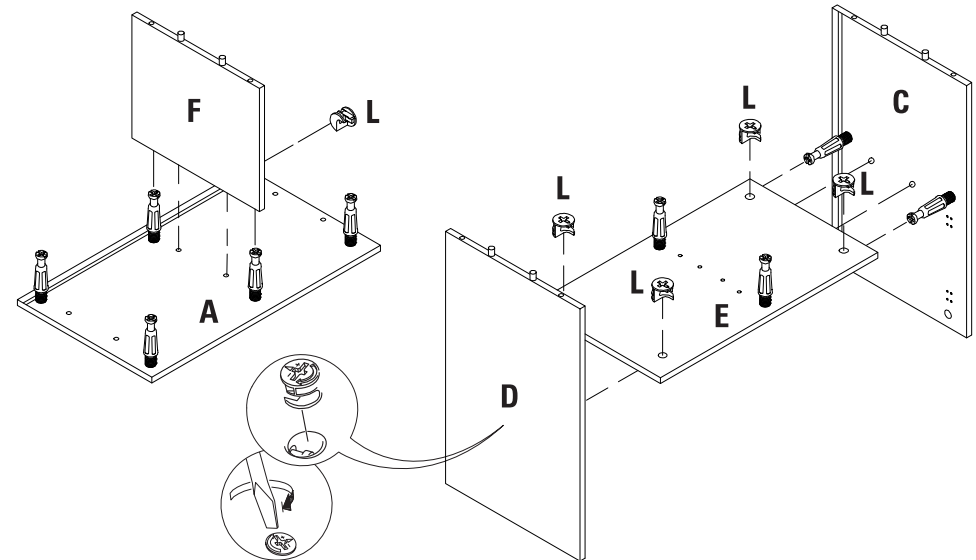


Assembly con't

 - 3** Secure middle panel (E) to divider (F) using screws (O). Turn and lock cams of side panels (C and D) to the top panel (A).

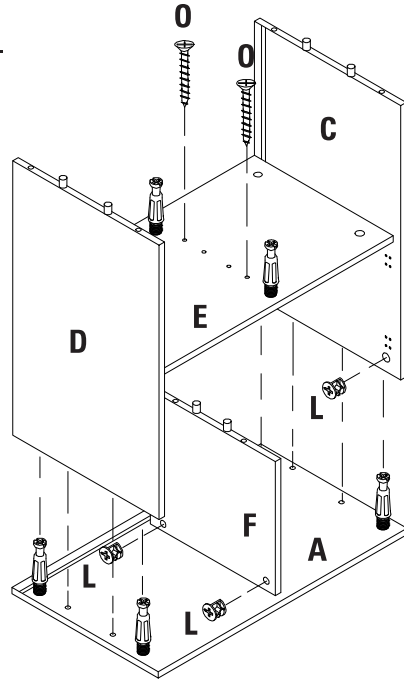


- 4** Insert lower divider (F) to the middle panel (E) and turn and lock cam.

 Slide back panel (I) into the grooves on the back of the side panels (C and D).

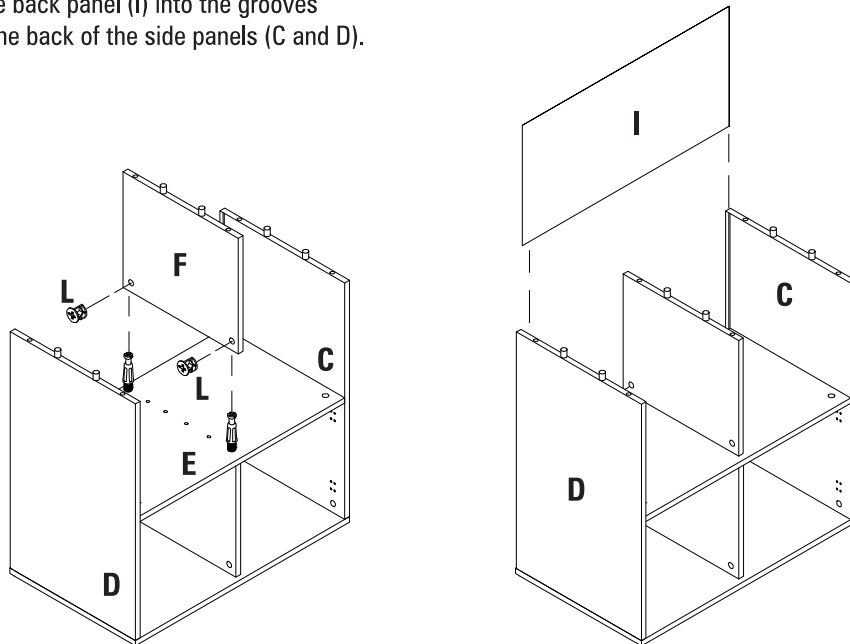


Assembly con't

 
- 5** Attach bottom panel (B) to the cabinet with screws (O).

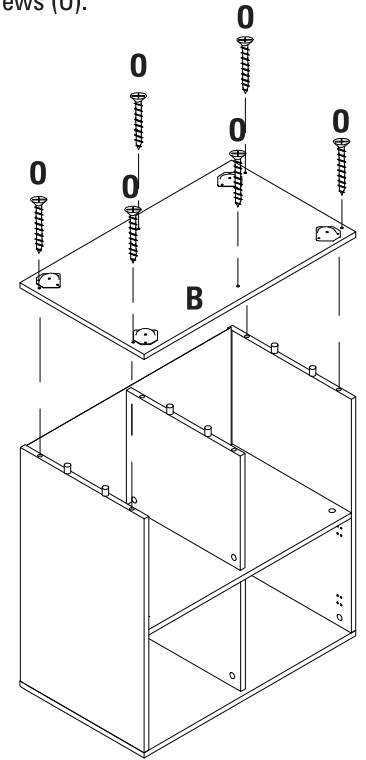

 
- 6** Attach legs (J) to the bottom of the bottom panel (B).

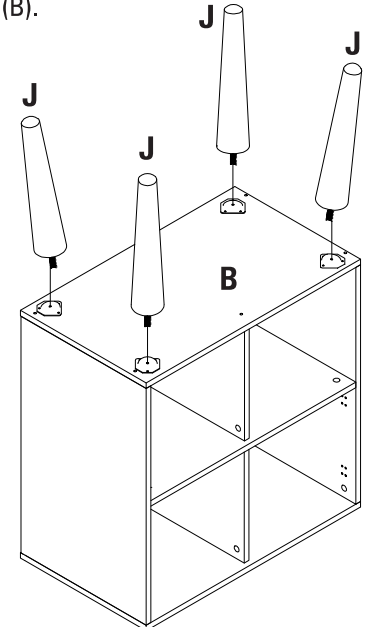

Door Installation

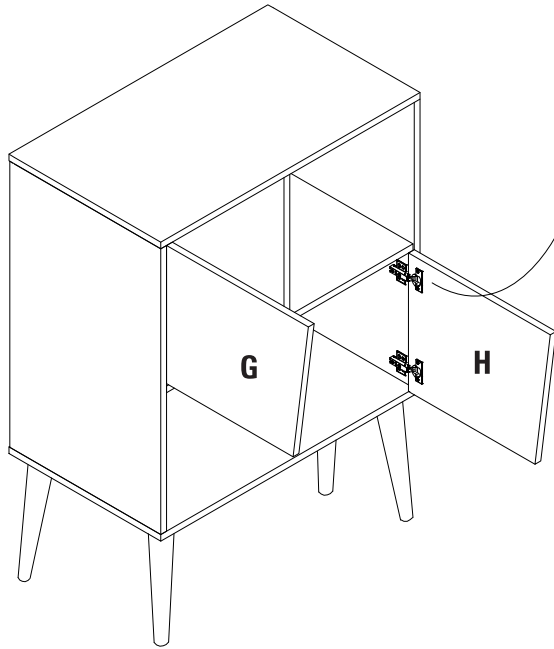 



 
Screw hinges (P) to door (H) using screws (N). Repeat this step for door (G).

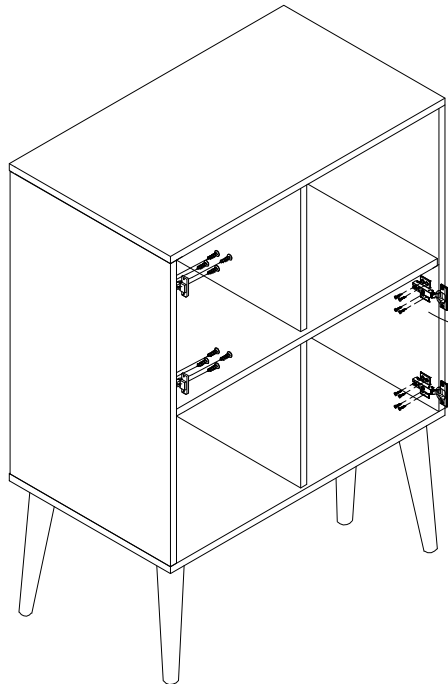

Then screws hinge (P) to inside of cabinet with screws (N).



Door Adjustment

   If door rubs along shelf. Loosen screws on hinge and adjust door using the guides below till it doesn't rub and tighten screws.

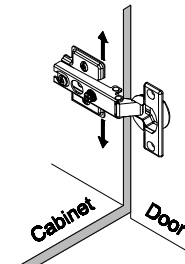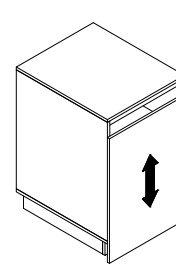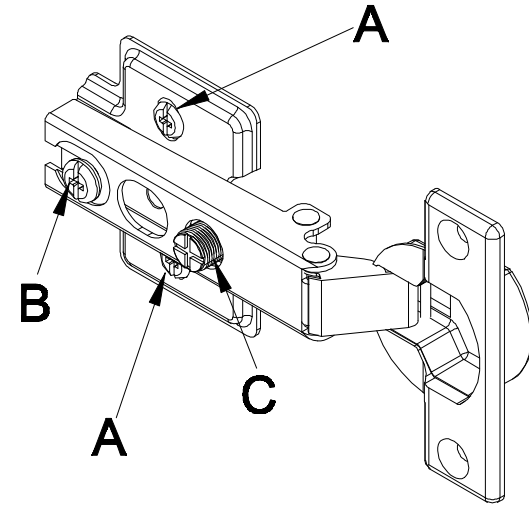



To adjust the vertical height.

  Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

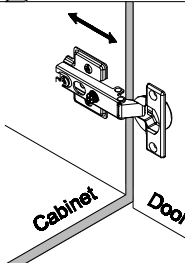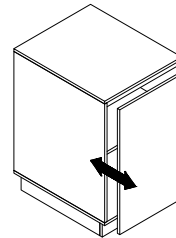

To adjust depth.

  Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

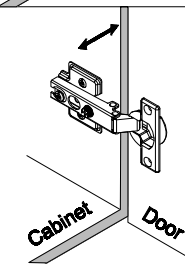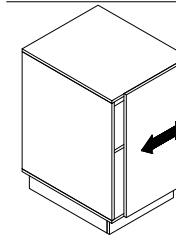

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.