

Thank you for your order!

We appreciate your business. Additional information on your product may be available on our website.



Happy?

Wonderful! We are very glad. Please share your experience with us and others. It helps us know what you like best!

- Review this product at www.householdessential.com.

Search the item # from the home page to find the product. Leave your review under the review tab on the product's page!

- Follow us on Facebook and Instagram!

Customer Service

1-800-922-5524 | 1-314-428-5657
info@householdessential.com

Open Mon-Fri at 8:30 am CT.
Closed all national holidays.



©2019 HOUSEHOLD ESSENTIALS, LLC
Hazelwood, MO 63042
www.householdessential.com

9/2019

Galvanized Steel Clothesline T-Post T-2050



Sunline
ENERGY-SAVER


Assemble the Pole

STEP 1

Attach 3 sections of pole together. Use two 2 1/4" bolts to attach the "T" arm to the "C" section of vertical pole. Using the outside holes of the "C" section insert bolts and tighten with hex nut.

STEP 2

Insert eye bolts and secure with hex nuts.

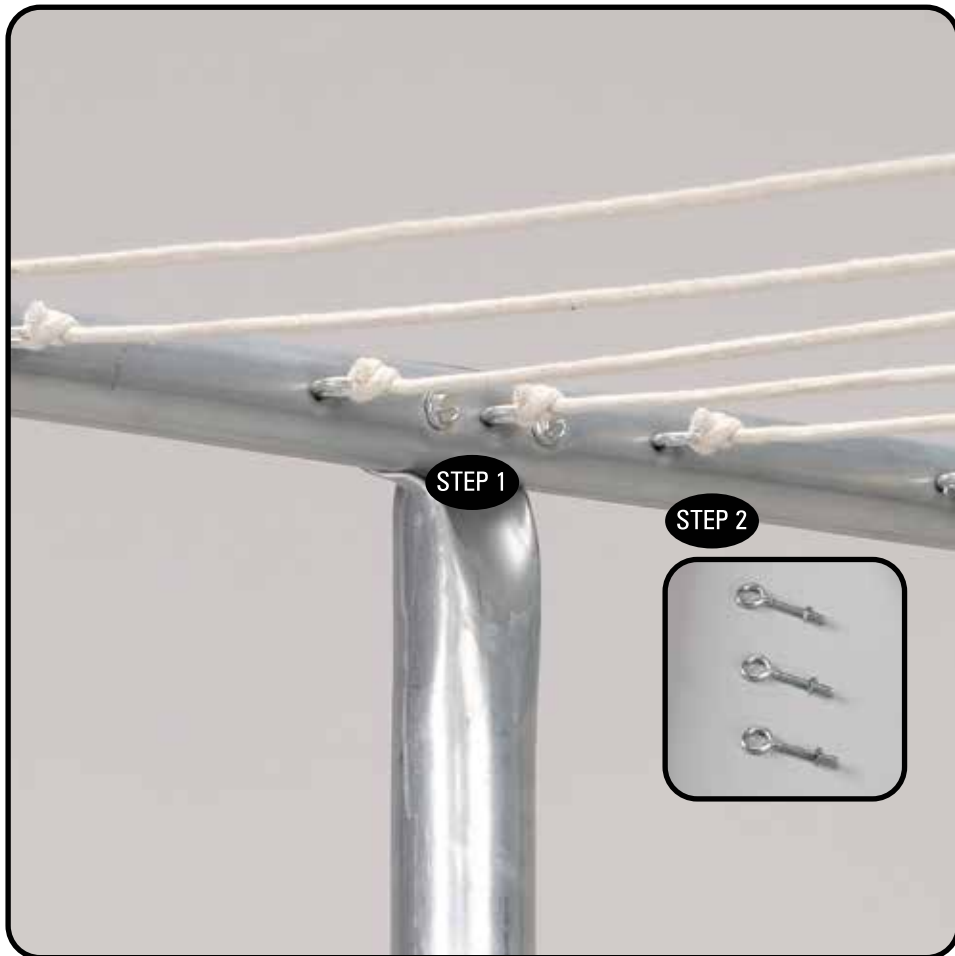


Install in Ground

STEP 3

Dig a tapered hole, wider at the bottom than the top, as shown. **Position post in the direction clothesline will hang.** Fill in gravel, concrete, and dirt around pole. Allow concrete to set before stringing clothesline

NOTE: Use a level to ensure pole is vertical in ground before concrete sets.

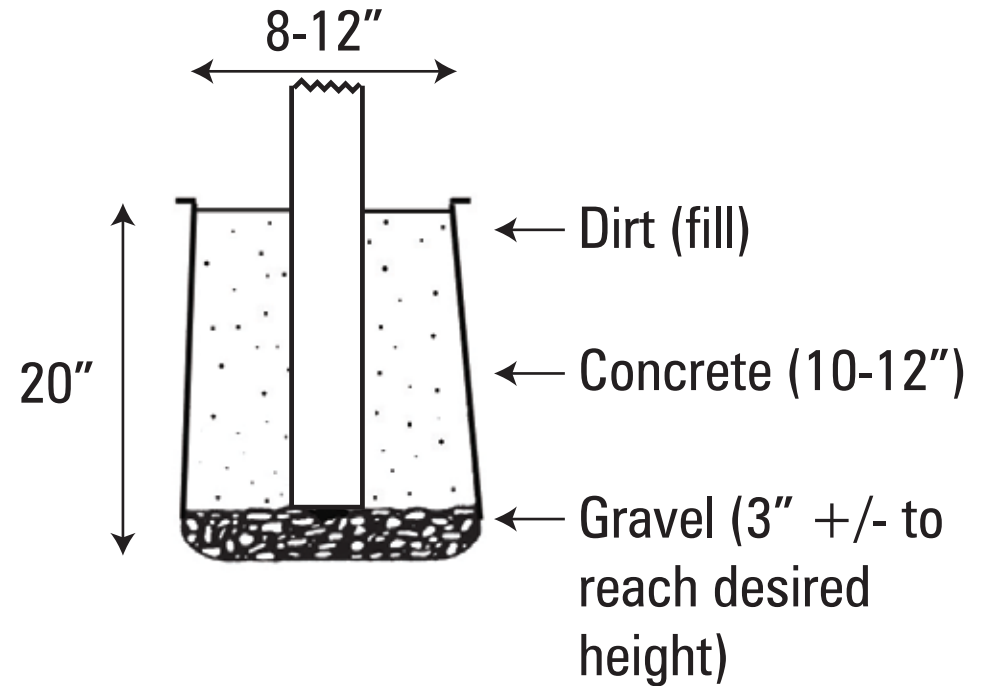

NOTE: 2 T-posts are required to set up a free-standing clothesline. Each post is sold separately. Posts may be used with both cotton and synthetic clothesline.